This copy may be copied for maintenance of Richter play equipment. Instructions for wear The equipment must be checked for Proof of correct operation and safety, especially maintenance checks of play equipment the points listed below: Stainless steel Playground..... 1. Clean with stainless steel spray using a clean Date of installation cloth. Checks depend on the type of equipment. Capstan Any equipment with moving parts must be checked at least twice a year, static Check for proper function. equipment at least once a year. Structural stability Intervals for maintenance work and checks generally depend on 3. In order to check the fixation to the ground or corrosion, uncover the foundations once a - the location - the usage - the frequency of use - possible vandalism For more details see also "General instructions for maintenance of playgrounds". **Turning Capstan** Order No. 11.02400 1 Special notes, e.g. for repairs