Instructions for wear checks of play equipment	The equipment must be checked for correct operation and safety, especially the points listed below:	Proof of maintenance
Playground	Wooden parts	
Date of installation	<ol> <li>Check for rot and, if necessary, smooth out splinters and round off sharp edges and cracks</li> </ol>	
Any equipment with moving parts must be checked at least twice a year, static equipment at least once a year.	<ol> <li>Check that all bolts and screws as well as all wood joints are tight, retighten if necessary.</li> </ol>	
Intervals for maintenance work and checks generally depend on - location	<b>3. Recommendation:</b> apply paraffin wax to the end grain areas once a year, especially near the ground; please refer to Order No. 0.90100, 1 litre.	
<ul><li>usage</li><li>frequency of use</li><li>possible vandalism</li></ul>	Structural stability	
For more details see also "General instructions for maintenance of playgrounds".	4. In order to check the steel feet for corrosion uncover the foundation once a year.	
Climbing Trunk for Totter Trail Order No. 4.03130/4.03131		9
		Special notes, e.g. for repairs
	Repair not carried out, it is still possible to play on equipment	
	Repair not carried out, equipment is taken out of action	
	All work carried out, everything is in order	
	Maintenance carried out by:	
	Date	